

034EFI

RELAY BOARD



BAT+ -- BATTERY +12V

BAT- -- BATTERY -12V

ECU- -- ECU GROUND

INJSW -- +12V TRIGGER FOR RELAY #2 TO POWER *

IGN_P -- SWITCHED 12V+ POWER OUTPUT VIA RELAY/FUSE #1

INJ_P -- SWITCHED 12V+ POWER OUTPUT VIA RELAY/FUSE #2

ECU+ -- SWITCHED 12V+ POWER OUTPUT VIA RELAY/FUSE #2

PUMP -- SWITCHED 12V+ POWER OUTPUT VIA RELAY/FUSE #3

FAN -- SWITCHED 12V+ POWER OUTPUT VIA RELAY/FUSE #4

GPO_0 -- GROUND TRIGGER FOR RELAY #3. COMPATIBLE
WITH ALL GPO OUTPUTS ON 034EFI ECU'S

GPO_1 -- GROUND TRIGGER FOR RELAY #4. COMPATIBLE
WITH ALL GPO OUTPUTS ON 034EFI ECU'S

IGNSW -- +12V TRIGGER FOR RELAY #1 *

*BY DEFAULT RELAYS 1&2 ARE TRIGGERED TOGETHER,
IF INDEPENDANT OPERATION IS DESIRED THE JUMPER
(J3) BETWEEN THE RELAYS MUST BE CUT